


REPLACEMENT PARTS LIST

MG2R SERIES
SINGLE STAGE CONDENSING DOWNFLOW GAS FURNACE
95% AFUE

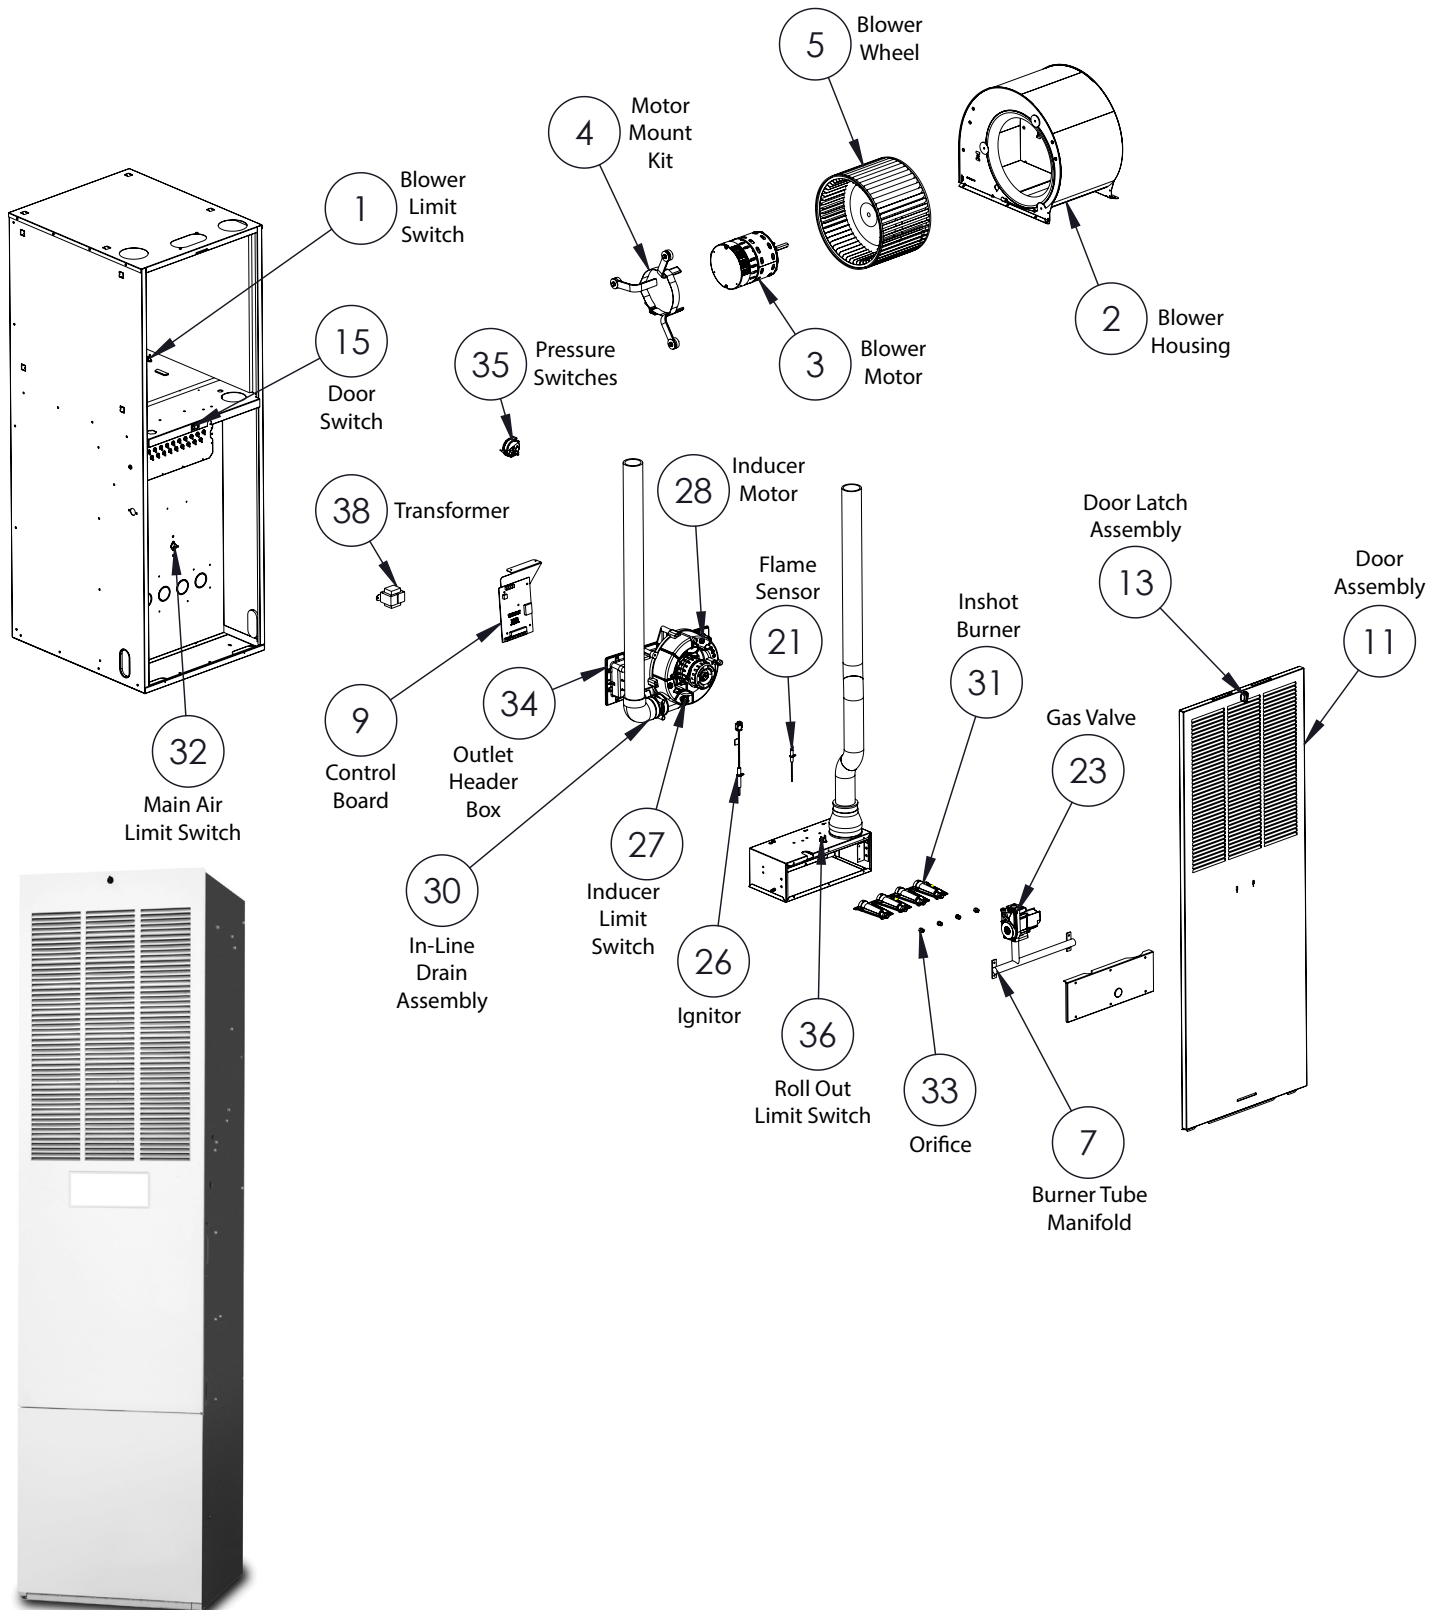

95% AFUE**MG2R SERIES GAS FURNACE**

		045F	045T	060F	060T	072F	072T
1	Blower Limit Switch	626602R	626602R	626602R	626602R	626602R	626602R
2	Blower Housing	297217R	297217R	297217R	297217R	297217R	297217R
3	Blower Motor	104856008R	104856005R	104856009R	104856006R	104856010R	104856007R
4	Blower Motor Mount Kit	904951	904951	904951	904951	904951	904951
5	Blower Wheel	667258R	667258R	667258R	667258R	667258R	667258R
6	Burner Box Assembly (Not Shown)	921495	921495	921599	921599	921496	921496
7	Burner Tube Manifold	664639R	664639R	664639R	664639R	664639R	664639R
8	Burner View Port (Not Shown)	632216R	632216R	632216R	632216R	632216R	632216R
9	Control Board Note: For units manufactured on or after 07/08/2025	1046397R	1046397R	1046397R	1046397R	1046397R	1046397R
10	Control Board kit Note: For units manufactured on or before 07/07/2025	1050166	1050166	1050166	1050166	1050166	1050166
11	Coil Door Assembly (Not Shown)	104852601R	104852601R	104852601R	104852601R	104852601R	104852601R
12	Coil Door Assembly (Not Shown)*	104855701R	104855701R	104855701R	104855701R	104855701R	104855701R
13	Door Assembly	104855801R	104855802R	104855801R	104855802R	104855801R	104855802R
14	Door Assembly *	104855803R	104855804R	104855803R	104855804R	104855803R	104855804R
15	Door Latch (Coil Door) (Not Shown)	668420R	668420R	668420R	668420R	668420R	668420R
16	Door Latch Assembly (Furnace Door)	1036349R	1036349R	1036349R	1036349R	1036349R	1036349R
17	Door Strike (Coil Door) (Not Shown)	1018719	1018719	1018719	1018719	1018719	1018719
18	Door Switch	632337R	632337R	632337R	632337R	632337R	632337R
19	Drain Tee (1/2 x 1/2 x 1/2) (Not Shown)	618060R	618060R	618060R	618060R	618060R	618060R
20	Drain Tube (Hard, "J") (Not Shown)	663706R	663706R	663706R	663706R	663706R	663706R
21	Drain Tube (Soft, "J" 42") (Not Shown)	664278R	664278R	664278R	664278R	664278R	664278R
22	Filter (Not Shown)	669363R	669779R	669363R	669779R	669363R	669779R
23	Filter Retainer Wire (Not Shown)	669065R	669955	669065R	669955	669065R	669955
24	Flame Sensor	903600	903600	903600	903600	903600	903600
25	Fuse (Not Shown)	632261R	632261R	632261R	632261R	632261R	632261R
26	Gas Valve	1046626	1046626	1046626	1046626	1046626	1046626
27	Heat Exchanger (Not Shown)	921597	921597	921597	921597	921598	921598
28	Heat Exchanger (Not Shown)*	104391603R	104391603R	104391603R	104391603R	104391604R	104391604R
29	Ignitor	1046527S	1046527S	1046527S	1046527S	1046527S	1046527S
30	Inducer Limit Switch	626599R	626599R	626599R	626599R	626599R	626599R
31	Inducer Motor (with Gasket)	921494	921494	921494	921494	921494	921494
32	Inducer Orifice (Not Shown)	669927R	669927R	669749R	669749R	669712R	669712R
33	Inline Drain Assembly	664435R	664435R	664435R	664435R	664435R	664435R
34	Inshot Burner	661135R	661135R	661135R	661135R	661135R	661135R
35	Main Air Limit Switch	626615R	626615R	626617R	626617R	626598R	626598R
36	Main Air Limit Switch *	1018472R	1018472R	1018472R	1018472R	626598R	626598R
37	Orifice (Natural Gas)	661049R	661049R	661045R	661045R	661047R	661047R
38	Orifice (LP Gas)	661057R	661057R	661055R	661055R	661056R	661056R
39	Outlet Header Box	904802	904802	904802	904802	904802	904802
40	Pressure Switch	632492R	632492R	632624R	632624R	632492R	632492R
41	Roll-Out Limit Switch	626608R	626608R	626608R	626608R	626608R	626608R
42	Set of Wires (Not Shown)	104959702R	104959702R	104959702R	104959702R	104959702R	104959702R
43	Transformer	622341R	622341R	622341R	622341R	622341R	622341R
44	Motor Choke (For Select Models)	622340R	622340R	622340R	622340R	622340R	622340R

* Items used only on ACM models

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

