



Description

Evaporative Humidifiers use the principle that vapor (evaporated water) is created when warm air blows over a water-soaked area. As the vapor circulates, the relative humidity rises.

The humidity control monitors the relative humidity and activates the humidifier accordingly. The humidifier has a water supply that dispenses water evenly over a humidifier pad. The warm, dry air from the furnace passes over the humidifier pad and picks up the moist air to circulate it throughout your home.

Features and Benefits

- Increases the relative humidity in your home, allowing you to lower your thermostat setting and still have the same comfort level.
- Filter access is easy, allowing maintenance and upkeep easier.
- Only runs water and air through the system when humidity is needed.
- Easy-to-use humidity control included.
- Moisture control helps protect wood floors and furnishings.
- 5-Year Parts Limited Warranty. Complete warranty details available from your local dealer or at www.cleancomfort.com.

Specifications

	HE12A2	HE17A2
Humidifying Capacity	12 Gallons Per Day	17 Gallons Per Day
Humidified Area	Up to 16,000 cubic feet	Up to 20,000 cubic feet
Duct Opening width x height	9-5/16 in. x 9-7/16 in. (238 x 241 mm)	9-3/4 in. x 12-5/8 in. (248 x 321 mm)
Bypass Duct Opening	6 in. (152 mm)	
Electrical Ratings and Tolerance	24VAC, 60 HZ, 0.5 A Max	24VAC, 60 HZ, 0.75 A Max
Replacement Pad with Agion Coating	HE22E1003	HE26E1004
Replacement Pad without Agion Coating	CCF-A10	CCF-A35
Pad Size	9-1/2 in. x 9-13/16 in. x 1-1/2 in. (241 x 249 x 38 mm)	10 in. x 13 in. x 1-1/2 in. (254 x 330 x 38 mm)
Drain Fitting	1/2 in. (13 mm)	
Flow Rate at Nozzle	4.7 GPH (18 L/hr.) under 120 psi	
Operating Ambient Temperature	34 to 90 °F, 1.1 to 32 °C	

Evaporative Humidifier

**Models: HE12A2
HE17A2**



WARNING

Only personnel that have been trained to install, adjust, service or repair (hereinafter, "service") the equipment specified in this manual should service the equipment. The manufacturer and seller will not be responsible for any injury or property damage arising from improper service or service procedures. If you service this unit, you assume responsibility for any injury or property damage which may result. In addition, in jurisdictions that require one or more licenses to service the equipment specified in this manual, only licensed personnel should service the equipment. Improper installation, adjustment, servicing or repair of the equipment specified in this manual, or attempting to install, adjust, service or repair the equipment specified in this manual without proper training may result in product damage, property damage, personal injury or death.