

June 2026

OCB819

REVISED EDITION-B

PARTS CATALOG


<Outdoor unit>

Model name

**MXZ-SM36NL
MXZ-SM48NL
MXZ-SM60NL
MXZ-SM36NLHZ
MXZ-SM42NLHZ
MXZ-SM48NLHZ
MXZ-SM60NLHZ**

• Some contents have been added in REVISED EDITION-B.

OCB819A is void.

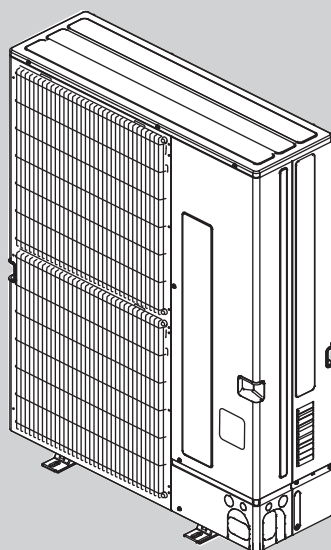

CONTENTS

- 1. SERVICE REF. 3**
- 2. SERVICE PARTS LIST 4**
- 3. OPTIONAL PARTS 24**

SERVICE MANUAL (OCH819)

1 SERVICE REF.

MXZ-SM36NL-U1
MXZ-SM48NL-U1
MXZ-SM60NL-U1
MXZ-SM36NLHZ-U1
MXZ-SM42NLHZ-U1
MXZ-SM48NLHZ-U1
MXZ-SM60NLHZ-U1

2 SERVICE PARTS LIST

STRUCTURAL PARTS

MXZ-SM36NL-U1

MXZ-SM48NL-U1


MXZ-SM60NL-U1

MXZ-SM36NLHZ-U1

MXZ-SM42NLHZ-U1

MXZ-SM48NLHZ-U1

MXZ-SM60NLHZ-U1

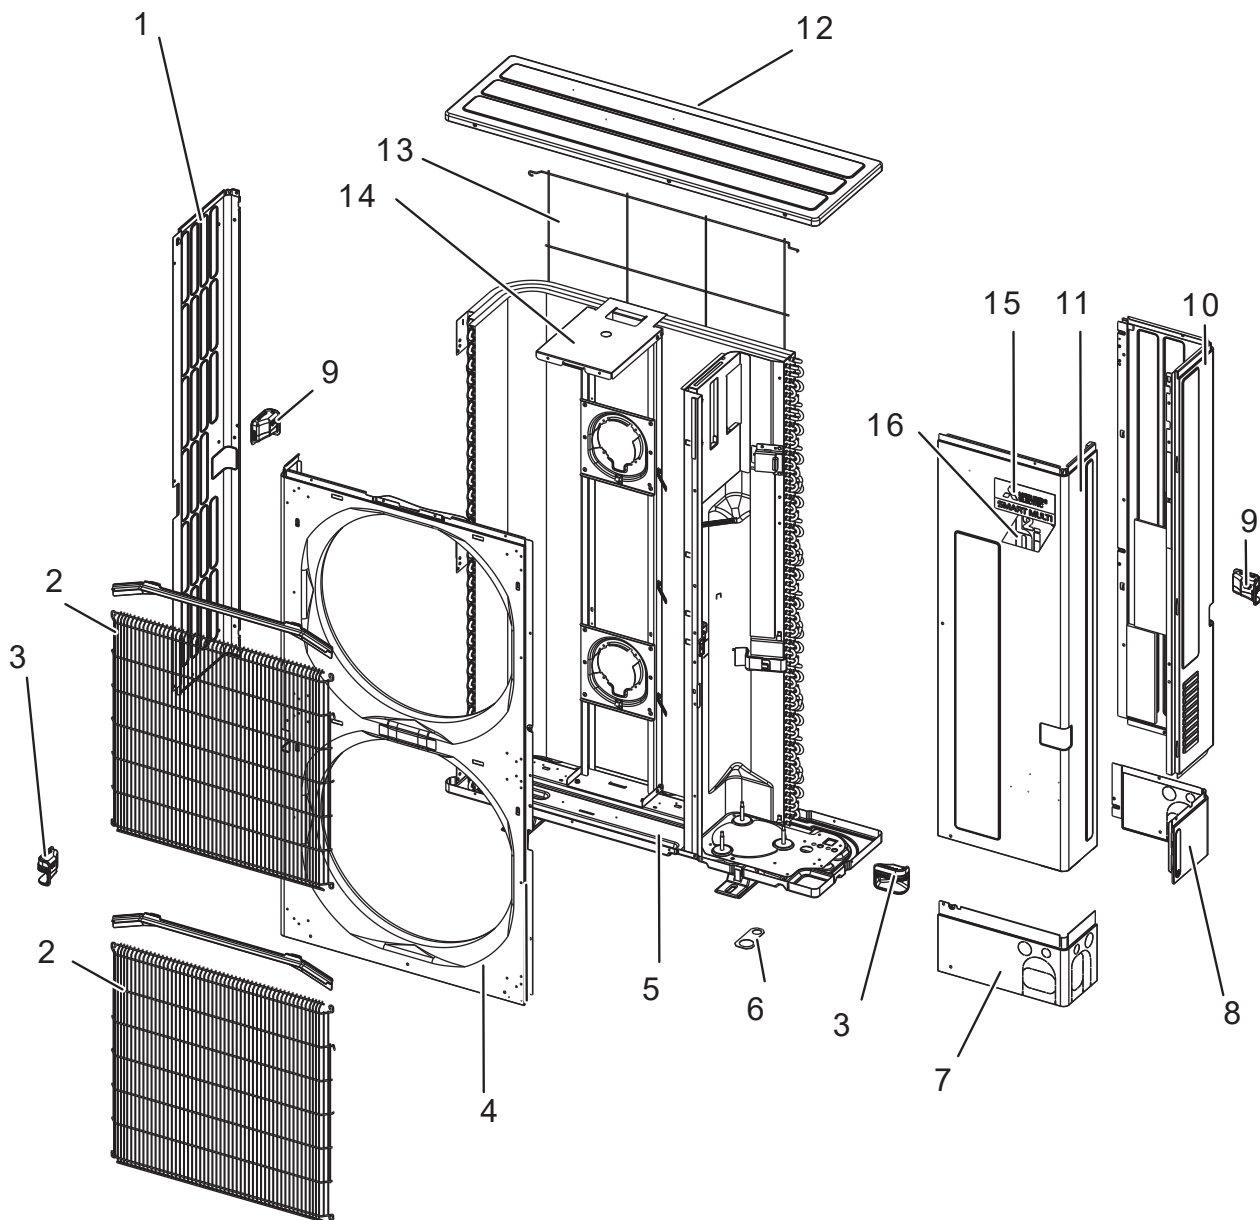


1. The part quantity below indicates the required number of pieces per unit.
2. The circled No. indicates that the part is not shown in the figure.

No.	Part No.	Part Name	MXZ-SM36NL-U1	MXZ-SM48NL-U1	MXZ-SM60NL-U1	MXZ-SM36NLHZ-U1	MXZ-SM42NLHZ-U1	MXZ-SM48NLHZ-U1	MXZ-SM60NLHZ-U1	Remarks
1	R 0 1 E 3 0 6 6 2	SIDE PANEL (L)	1	1	1	1	1	1	1	
2	R 0 1 E 7 3 6 9 1	WIRE GRILLE	2	2	2	2	2	2	2	
3	R 0 1 E 0 5 6 5 5	HANDLE (FRONT)	2	2	2	2	2	2	2	
4	R 0 1 E 2 3 6 6 8	FRONT PANEL	1	1	1	1	1	1	1	
5	R 0 1 E 6 6 6 8 6	BASE ASSY	1	1	1	1	1	1	1	
6	T 7 W E 0 5 6 1 7	CONDUIT PLATE	1	1	1	1	1	1	1	
7	R 0 1 E 5 5 6 5 8	COVER PANEL (FRONT)	1	1	1	1	1	1		
7	R 0 1 E 6 1 6 5 8	COVER PANEL (FRONT)							1	
8	R 0 1 R 0 1 6 5 8	COVER PANEL (REAR)	1	1	1	1	1	1	1	
9	R 0 1 E 0 6 6 5 5	HANDLE (REAR)	2	2	2	2	2	2	2	
10	R 0 1 E 8 4 6 6 1	SIDE PANEL (R)	1	1						
10	R 0 1 E 8 5 6 6 1	SIDE PANEL (R)			1	1	1	1	1	
11	T 7 W E 3 0 6 6 8	SERVICE PANEL	1	1	1	1	1	1	1	
12	T 7 W E 2 2 6 4 1	TOP PANEL	1	1	1	1	1	1		
12	T 7 W E 2 5 6 4 1	TOP PANEL							1	
13	R 0 1 E 1 0 6 9 8	REAR GUARD	1	1	1	1	1	1	1	
14	R 0 1 E 5 9 1 3 0	MOTOR SUPPORT	1	1						
14	R 0 1 E 6 0 1 3 0	MOTOR SUPPORT			1	1	1	1	1	
15	T 7 W B 0 3 0 0 5	BRAND LABEL/SM	1	1	1	1	1	1	1	
16	T 7 W A 1 0 0 0 5	LABEL (H2I)	1	1	1	1	1	1	1	

FUNCTIONAL PARTS

MXZ-SM36NL-U1

MXZ-SM48NL-U1

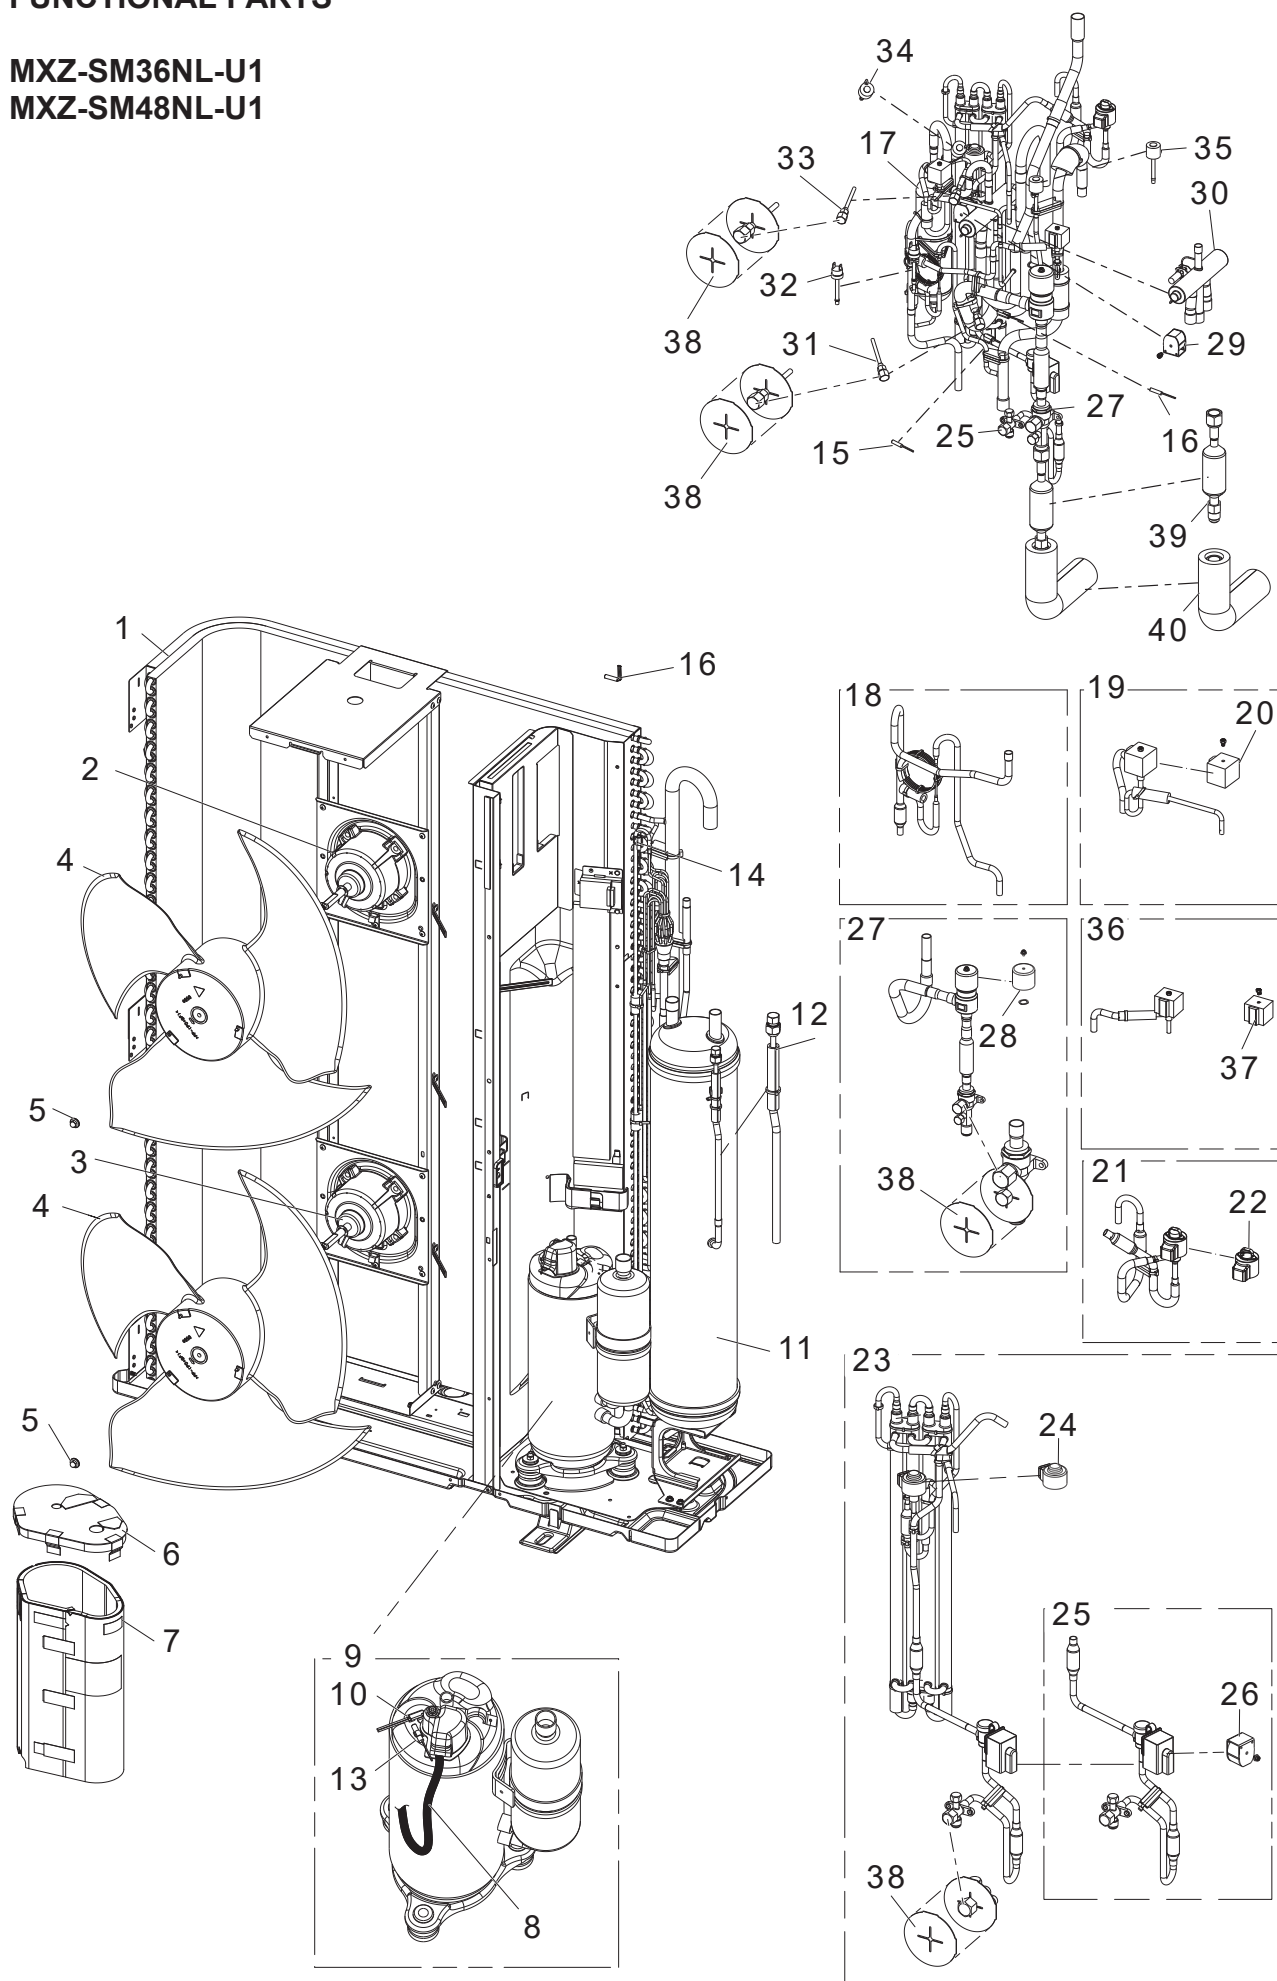


1. The part quantity below indicates the required number of pieces per unit.
2. The circled No. indicates that the part is not shown in the figure.

No.	Part No.	Part Name	MXZ-SM36NL-U1	MXZ-SM48NL-U1	Wiring Diagram Symbol	Remarks
1	T7W F11 408	HEAT EXCHANGER	1	1		
2	T7W A10 221	FAN MOTOR	1	1	MF1	
3	T7W A11 221	FAN MOTOR	1	1	MF2	
4	R01 E16 115	PROPELLER FAN/D550	2	2		
5	R01 E16 097	CAP NUT (MEC) M6	2	2		
6	R01 T17 602	COMP FELT/TOP	1	1		
7	T7W B22 602	COMP FELT-B	1	1		
8	T7W C24 510	LEAD ASSY COMP	1	1		
9	T97 4M0 006	COMPRESSOR	1	1	MC	MRB36FEGMC-L Includes RUBBER MOUNT
10	T7W E39 201	TRS ASSY	1	1	TRS	
11	T7W E34 440	ACCUMULATOR	1	1		When replacing No. 11, replace No. 12 at the same time.
12	T7W F00 419	FUSIBLE ASSY	1	1		
13	R01 E65 201	THERMISTOR/SHELL	1	1	TH4 (Compressor)	
14	R01 H87 202	THERMISTOR	1	1	TH3 (Outdoor Liquid Pipe)	
15	R01 M51 202	THERMISTOR	1	1	TH2 (HIC Pipe)	
16	R01 M53 202	THERMISTOR W	1	1	TH6 (Suction Pipe) TH7 (Ambient)	Combined Port
17	R01 E20 490	OIL SEPARATOR	1	1		
18	T7W A07 426	CT ASSY	1	1		
19	T7W E13 428	SV ASSY	1	1	SV1	Includes SV COIL
20	T7W V00 242	SOLENOID COIL (SV)	1	1	SV1	Includes SCREW
21	R01 A29 401	LEV ASSY-A	1	1	LEV-A	Includes LEV COIL
22	R01 H39 242	COIL (LEV)/XAP-5P WH	1	1	LEV-A	
23	T7W C08 401	HIC & LEV-B ASSY	1	1	LEV-B, SV4	Includes LEV COIL and SV COIL
24	R01 L10 242	COIL (LEV)/XAP-5P RED	1	1	LEV-B	
25	T7W E18 410	STOP VALVE ASSY-3/8F	1	1	SV4	3/8, Includes SV COIL
26	T7W V03 242	SOLENOID COIL (SV)	1	1	SV4	Includes SCREW
27	T7W E16 428	SV-BV ASSY	1	1	SV5	5/8, Includes SV COIL
28	T7W V01 242	SOLENOID COIL (SV)	1	1	SV5	Includes SCREW
29	T7W S10 242	SOLENOID COIL (21S4)	1	1	21S4	Includes SCREW
30	R01 E40 403	4WAY VALVE	1	1	21S4	
31	R01 E28 413	CHARGE PLUG/ST	1	1		
32	T7W E15 208	H. P. SWITCH UL4.14MPA	1	1	63H	
33	R01 E28 413	CHARGE PLUG/ST	1	1		
34	R01 H09 208	H. P. SENSOR	1	1	63HS	
35	R01 E06 209	LOW PRESSURE SENSOR	1	1	63LS	
36	T7W E17 428	SV ASSY	1	1	SV3	Includes SV COIL
37	T7W V02 242	SOLENOID COIL (SV)	1	1	SV3	Includes SCREW
38	T7W A01 455	REF. MARKER (SNAP) 1P	4	4		
39	R01 A01 467	MUFFLER SET	1	1		
40	R01 A01 466	JOINT PIPE SET	1	1		

ELECT PARTS

MXZ-SM36NL-U1

MXZ-SM48NL-U1

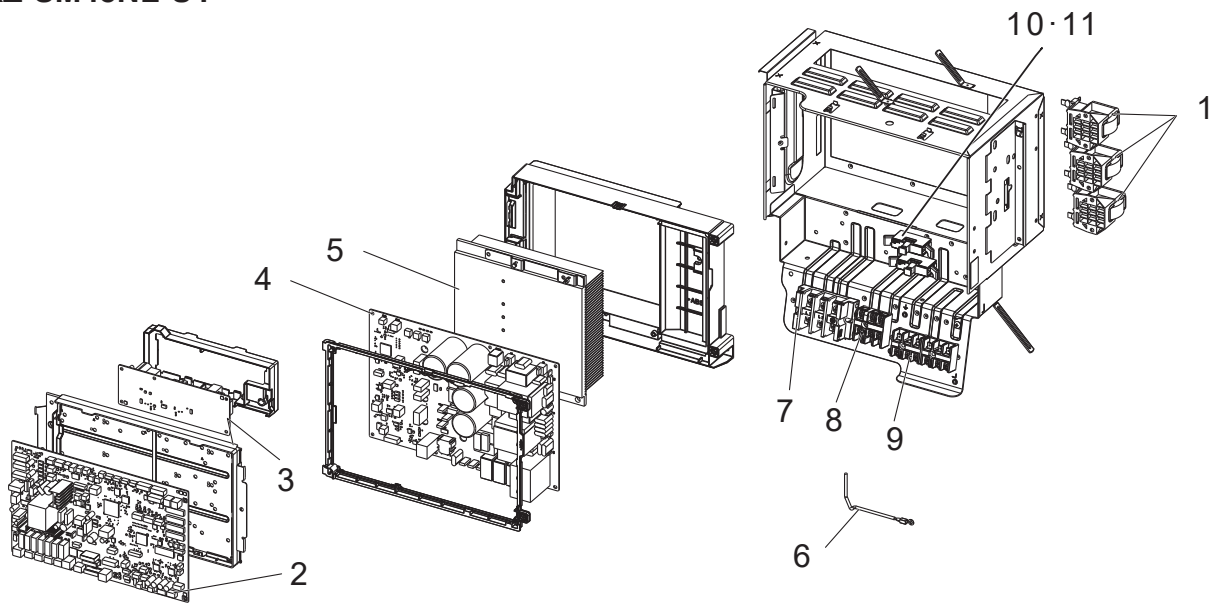


1. The part quantity below indicates the required number of pieces per unit.
2. The circled No. indicates that the part is not shown in the figure.

No.	Part No.	Part Name	MXZ-SM36NL-U1	MXZ-SM48NL-U1	Wiring Diagram Symbol	Remarks
1	R01 E58 259	REACTOR	3	3	DCL	
2	T7W M51 315	CONTROLLER BOARD	1	1	MULTI.C.B.	
3	R01 E10 311	M-NET POWER BOARD	1	1	M-NET P.B.	
4	T7W M05 373	POWER BOARD	1	1	P.B.	
5	R01 A26 371	HEAT SINK	1	1		Includes SCREWS
6	R01 M52 202	THERMISTOR (HS)	1	1	TH8 (Heat Sink)	
7	T7W P05 246	T.B./L1.L2.E	1	1	TB1	3P (L1.L2.E)
8	T7W S05 246	T.B./B1.B2.E	1	1	TB1B	3P (B1, B2, E)
9	R01 E27 246	T.B./M1.M2.S	2	2	TB3, TB7	3P (M1, M2, S)
10	R01 E23 239	FUSE 20 A 250 V	2	2	FUSE1,FUSE2	20 A 250 V
11	R01 E00 241	FUSE HOLDER	2	2		

FUNCTIONAL PARTS


MXZ-SM60NL-U1

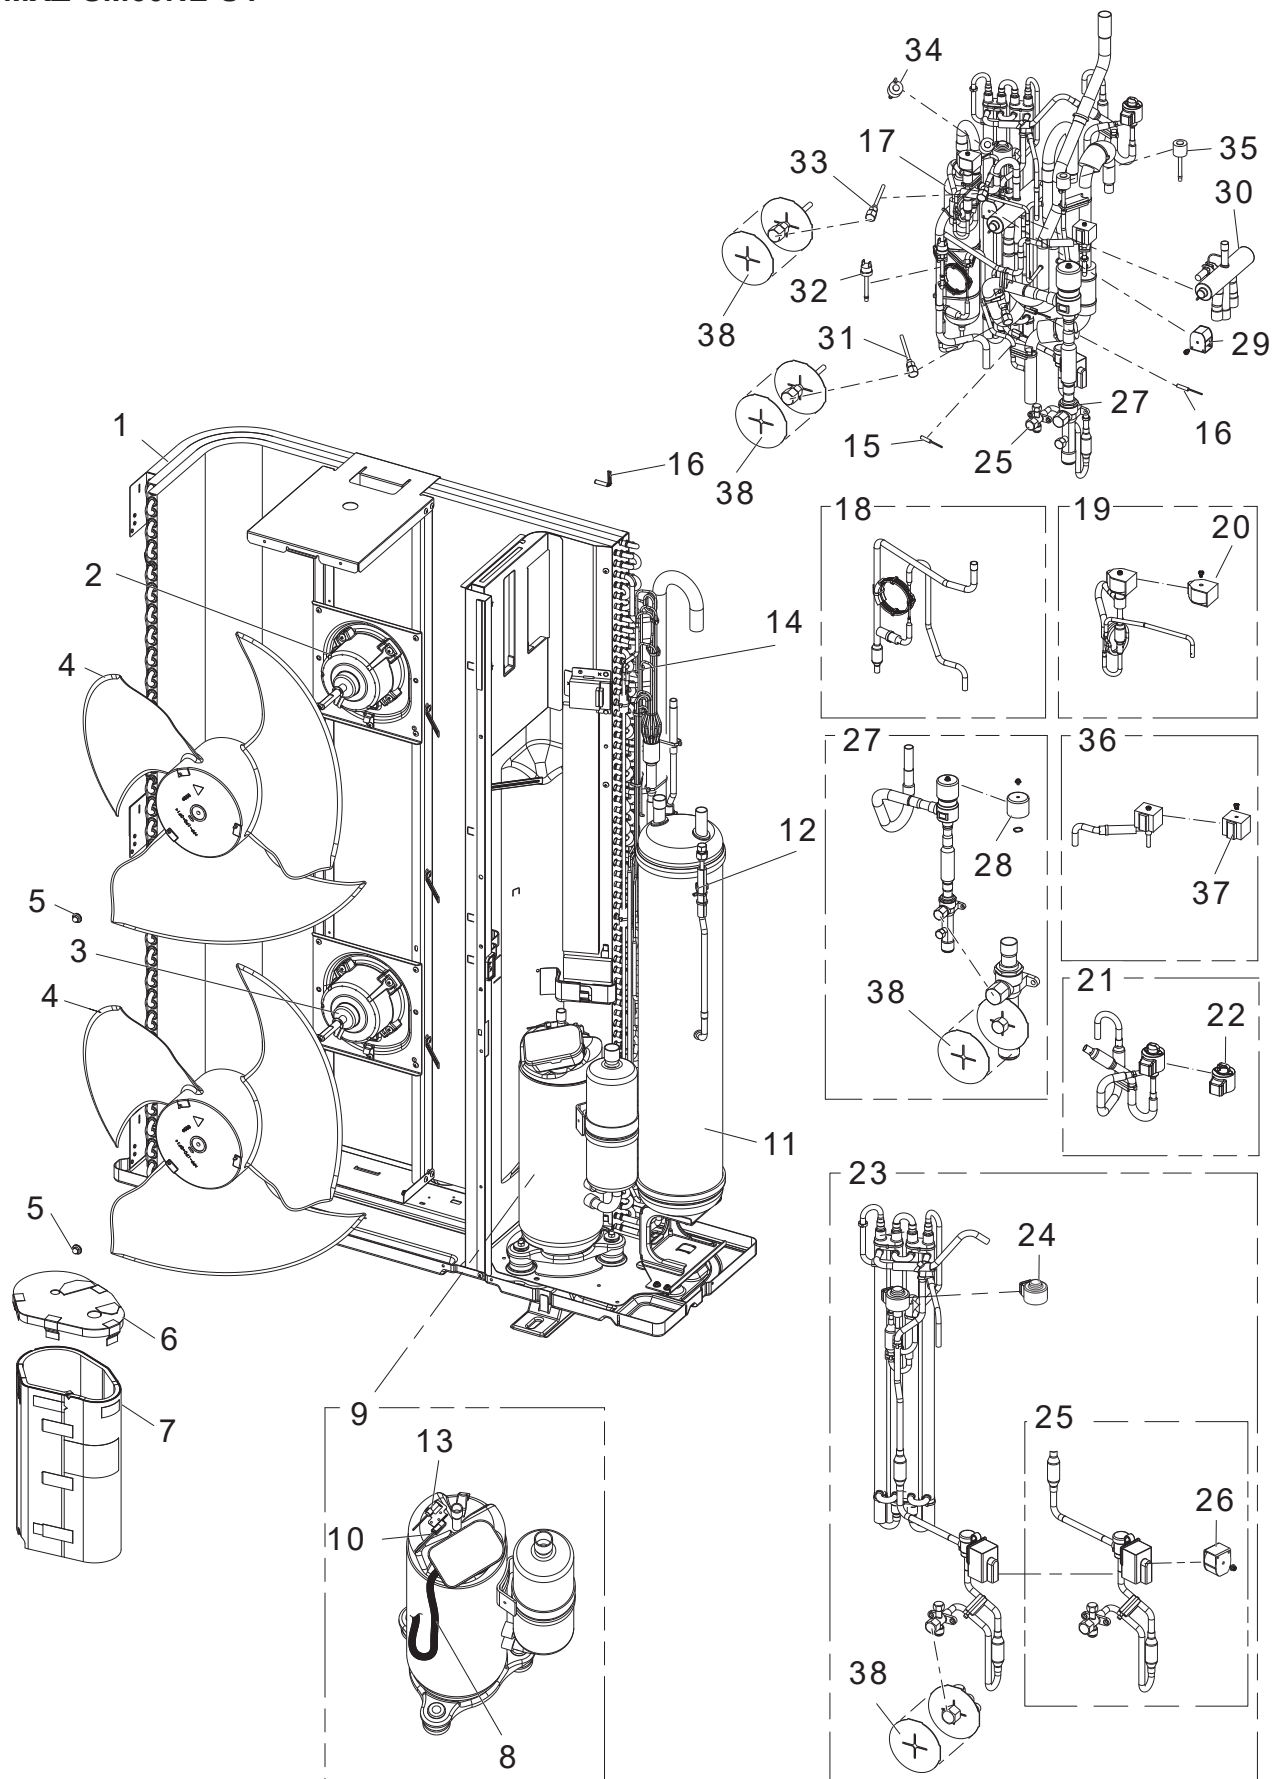

1. The part quantity below indicates the required number of pieces per unit.
2. The circled No. indicates that the part is not shown in the figure.

No.	Part No.	Part Name	MXZ-SM60NL-U1	Wiring Diagram Symbol	Remarks
1	T7W F12 408	HEAT EXCHANGER	1		
2	T7W A22 221	FAN MOTOR	1	MF1	
3	T7W A23 221	FAN MOTOR	1	MF2	
4	R01 E16 115	PROPELLER FAN/D550	2		
5	R01 E16 097	CAP NUT (MEC) M6	2		
6	R01 T17 602	COMP FELT-TOP	1		
7	T7W B22 602	COMP FELT-B	1		
8	R01 C18 510	LEAD ASSY COMP	1		
9	T97 4M0 008	COMPRESSOR	1	MC	MRB53FEJMC-L Includes RUBBER MOUNT
10	T7W E40 201	TRS ASSY	1	TRS	
11	T7W E34 440	ACCUMULATOR	1		When replacing No. 11, replace No. 12 at the same time.
12	T7W F00 419	FUSIBLE ASSY	1		
13	R01 E65 201	THERMISTOR/SHELL	1	TH4 (Compressor)	
14	R01 H87 202	THERMISTOR	1	TH3 (Outdoor Liquid Pipe)	
15	R01 M51 202	THERMISTOR	1	TH2 (HIC Pipe)	
16	R01 M53 202	THERMISTOR W	1	TH6 (Suction Pipe) TH7 (Ambient)	Combined Port
17	R01 E19 490	OIL SEPARATOR	1		
18	R01 C02 426	CT ASSY	1		
19	T7W E14 428	SV-CT ASSY	1	SV1	Includes SV COIL
20	T7W V04 242	SOLENOID COIL (SV)	1	SV1	Includes SCREW
21	R01 A29 401	LEV ASSY-A	1	LEV-A	Includes LEV COIL
22	R01 H39 242	COIL (LEV)/XAP-5P WH	1	LEV-A	
23	T7W C08 401	HIC & LEV-B ASSY	1	LEV-B, SV4	Includes LEV COIL and SV COIL
24	R01 L10 242	COIL (LEV)/XAP-5P RED	1	LEV-B	
25	T7W E18 410	STOP VALVE ASSY-3/8F	1	SV4	3/8, Includes SV COIL
26	T7W V03 242	SOLENOID COIL (SV)	1	SV4	Includes SCREW
27	T7W E18 428	SV-BV ASSY	1	SV5	3/4, Includes SV COIL
28	T7W V01 242	SOLENOID COIL (SV)	1	SV5	Includes SCREW
29	T7W S10 242	SOLENOID COIL(21S4)	1	21S4	Includes SCREW
30	R01 E40 403	4WAY VALVE	1	21S4	
31	R01 E28 413	CHARGE PLUG/ST	1		
32	T7W E15 208	H. P. SWITCH UL4.14MPA	1	63H	
33	R01 E28 413	CHARGE PLUG/ST	1		
34	R01 H09 208	H. P. SENSOR	1	63HS	
35	R01 E06 209	LOW PRESSURE SENSOR	1	63LS	
36	T7W E17 428	SV ASSY	1	SV3	Includes SV COIL
37	T7W V02 242	SOLENOID COIL (SV)	1	SV3	Includes SCREWS
38	T7W A01 455	REF. MARKER (SNAP) 1P	4		

ELECT PARTS
MXZ-SM60NL-U1

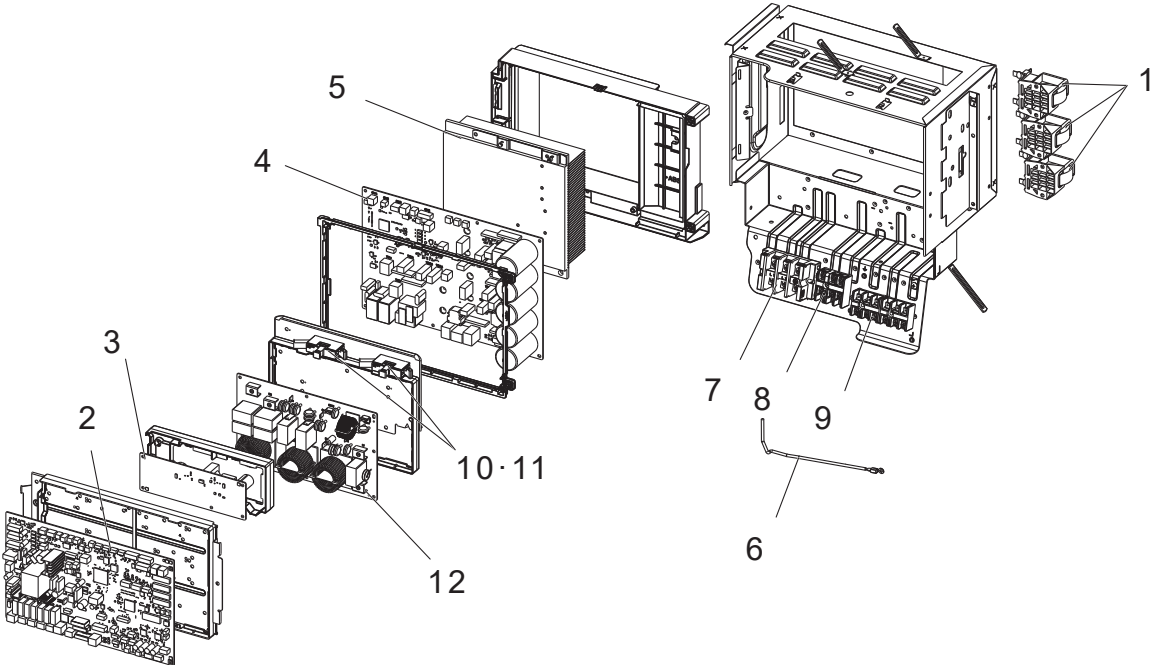

1. The part quantity below indicates the required number of pieces per unit.
2. The circled No. indicates that the part is not shown in the figure.

No.	Part No.	Part Name	MXZ-SM60NL-U1	Wiring Diagram Symbol	Remarks
1	R01 E58 259	REACTOR	3	DCL	
2	T7W M53 315	CONTROLLER BOARD	1	MULTI.C.B.	
3	R01 E10 311	M-NET POWER BOARD	1	M-NET P.B.	
4	T7W M07 373	POWER BOARD	1	P.B.	
5	R01 A27 371	HEAT SINK	1		Includes SCREWS
6	R01 M16 202	THERMISTOR (HS)	1	TH8 (Heat Sink)	
7	T7W P05 246	T.B./L1.L2.E	1	TB1	3P (L1.L2.E)
8	T7W S05 246	T.B./B1.B2.E	1	TB1B	3P (B1, B2, E)
9	R01 E27 246	T.B./M1.M2.S	2	TB3, TB7	3P (M1, M2, S)
10	R01 E23 239	FUSE 20 A 250 V	2	FUSE1,FUSE2	20 A 250 V
11	R01 E00 241	FUSE HOLDER	2		
12	T7W E55 346	NOISE FILTER	1	N.F.	


FUNCTIONAL PARTS

MXZ-SM36NLHZ-U1

MXZ-SM42NLHZ-U1

MXZ-SM48NLHZ-U1

MXZ-SM60NLHZ-U1

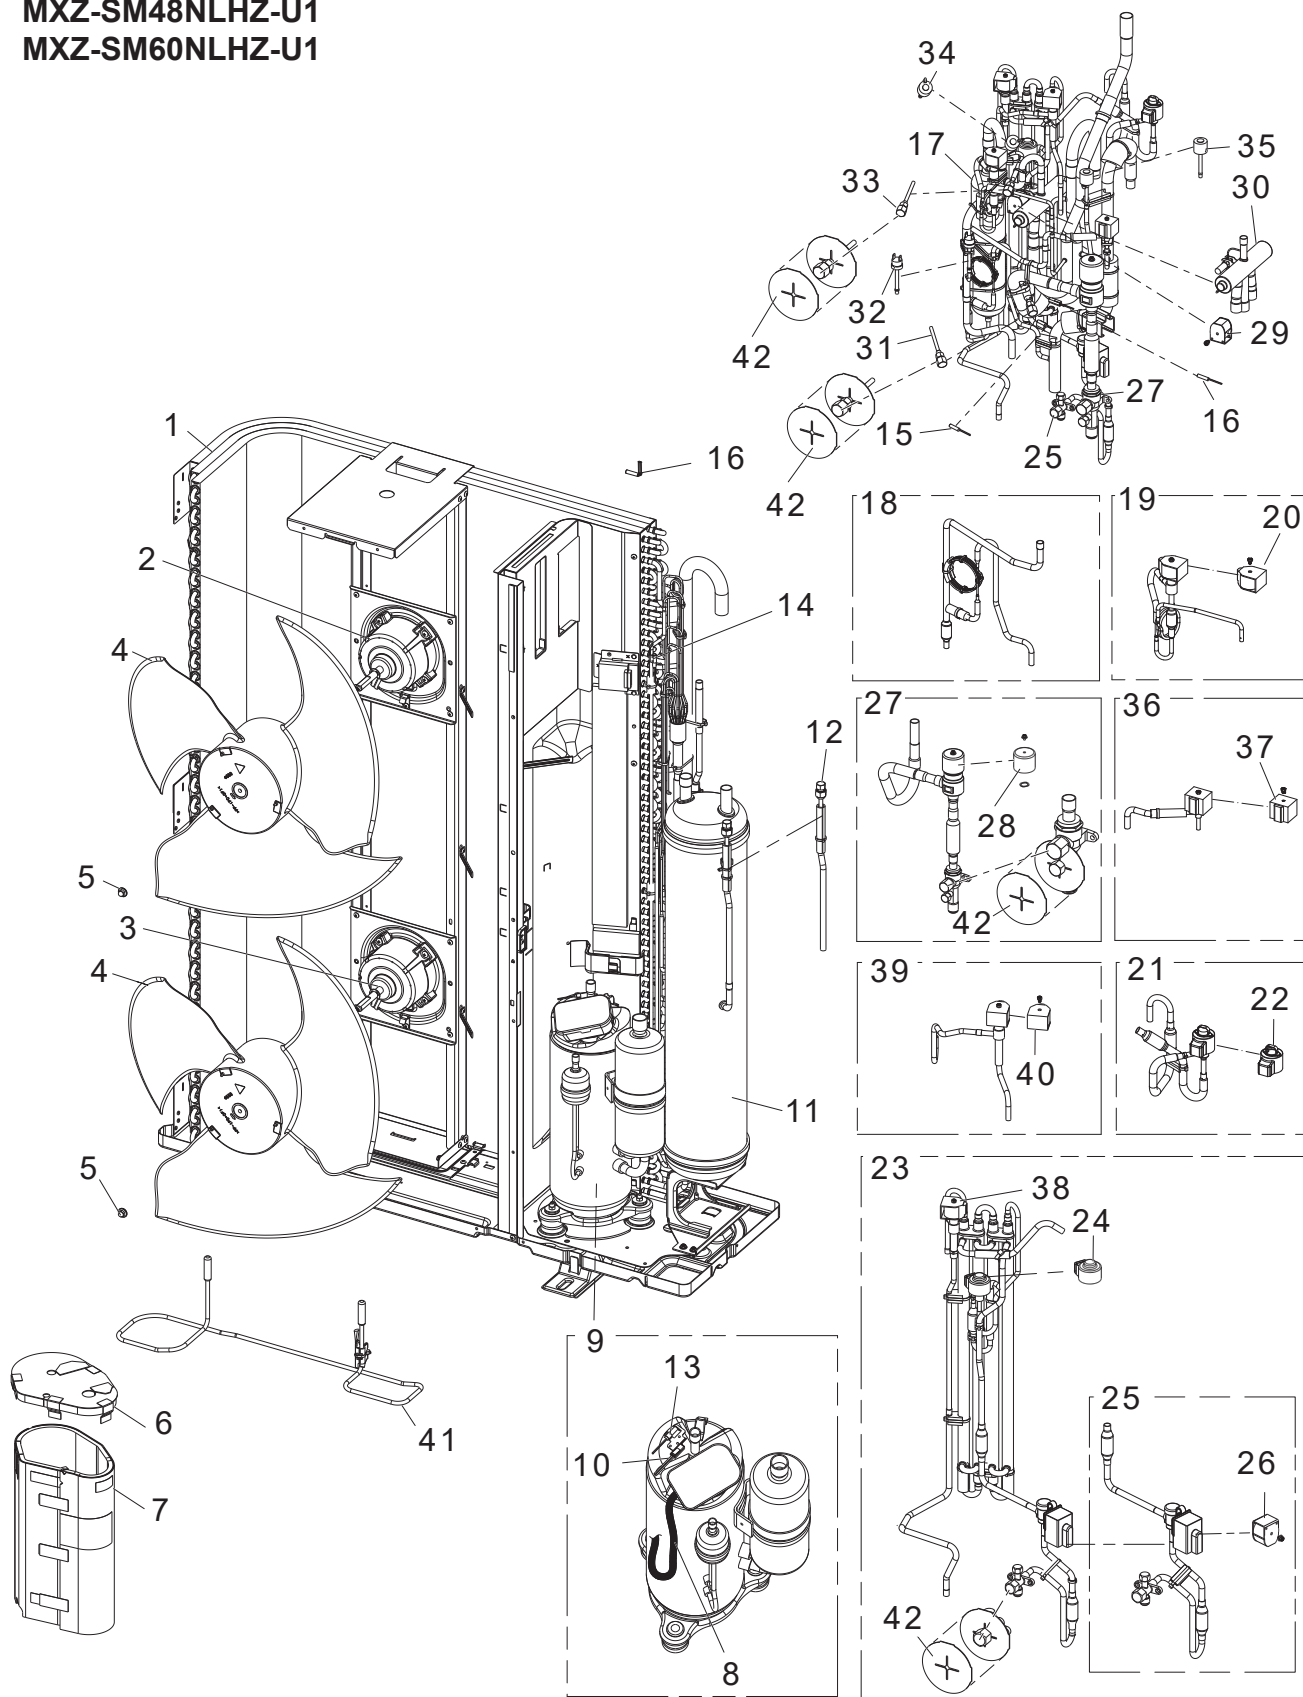

1. The part quantity below indicates the required number of pieces per unit.
2. The circled No. indicates that the part is not shown in the figure.

No.	Part No.	Part Name	MXZ-SM36NLHZ-U1	MXZ-SM42NLHZ-U1	MXZ-SM48NLHZ-U1	MXZ-SM60NLHZ-U1	Wiring Diagram Symbol	Remarks
1	T7W F12 408	HEAT EXCHANGER	1	1	1	1		
2	T7W A22 221	FAN MOTOR	1	1	1	1	MF1	
3	T7W A23 221	FAN MOTOR	1	1	1	1	MF2	
4	R01 E16 115	PROPELLER FAN/D550	2	2	2	2		
5	R01 E16 097	CAP NUT (MEC) M6	2	2	2	2		
6	R01 T18 602	COMP FELT-TOP/MRK	1	1	1			
6	R01 T21 602	COMP FELT-TOP/MRK				1		
7	T7W B22 602	COMP FELT-B	1	1	1			
7	T7W B24 602	COMP FELT-B				1		
8	R01 C18 510	LEAD ASSY COMP	1	1	1	1		
9	T97 4M0 009	COMPRESSOR	1	1	1	1	MC	MRK53FFJMC-L Includes RUBBER MOUNT
10	T7W E40 201	TRS ASSY	1	1	1	1	TRS	
11	T7W E34 440	ACCUMULATOR	1	1	1	1		When replacing No. 11, replace No. 12 at the same time.
12	T7W F00 419	FUSIBLE ASSY	1	1	1			
12	T7W F01 419	FUSIBLE ASSY				1		
13	R01 E65 201	THERMISTOR/SHELL	1	1	1		TH4 (Compressor)	
13	R01 E88 201	THERMISTOR/SHELL				1	TH4 (Compressor)	
14	R01 H87 202	THERMISTOR	1	1	1	1	TH3 (Outdoor Liquid Pipe)	
15	R01 M51 202	THERMISTOR	1	1	1	1	TH2 (HIC Pipe)	
16	R01 M53 202	THERMISTOR W	1	1	1	1	TH6 (Suction Pipe) TH7 (Ambient)	Combined Port
17	R01 E19 490	OIL SEPARATOR	1	1	1	1		
18	R01 C02 426	CT ASSY	1	1	1	1		
19	T7W E14 428	SV-CT ASSY	1	1	1	1	SV1	Includes SV COIL
20	T7W V04 242	SOLENOID COIL (SV)	1	1	1	1	SV1	Includes SCREW
21	R01 A29 401	LEV ASSY-A	1	1	1	1	LEV-A	Includes LEV COIL
22	R01 H39 242	COIL (LEV)/XAP-5P WH	1	1	1	1	LEV-A	
23	T7W B24 401	HIC & LEV-B ASSY	1	1	1	1	LEV-B, SV4, SV6	Includes LEV COIL and SV COIL
24	R01 L10 242	COIL (LEV)/XAP-5P RED	1	1	1	1	LEV-B	
25	T7W E18 410	STOP VALVE ASSY-3/8F	1	1	1	1	SV4	3/8, Includes SV COIL
26	T7W V03 242	SOLENOID COIL (SV)	1	1	1	1	SV4	Includes SCREW
27	T7W E16 428	SV-BV ASSY	1	1	1		SV5	5/8, Includes SV COIL
27	T7W E18 428	SV-BV ASSY				1	SV5	3/4, Includes SV COIL
28	T7W V01 242	SOLENOID COIL (SV)	1	1	1	1	SV5	Includes SCREW
29	T7W S11 242	SOLENOID COIL (21S4)	1	1	1	1	21S4	Includes SCREW
30	R01 E40 403	4WAY VALVE	1	1	1	1	21S4	
31	R01 E28 413	CHARGE PLUG/ST	1	1	1	1		
32	T7W E15 208	H. P. SWITCH UL4.14MPA	1	1	1	1	63H	
33	R01 E28 413	CHARGE PLUG/ST	1	1	1	1		
34	R01 H09 208	H. P. SENSOR	1	1	1	1	63HS	
35	R01 E06 209	LOW PRESSURE SENSOR	1	1	1	1	63LS	
36	T7W E17 428	SV ASSY	1	1	1	1	SV3	Includes SV COIL
37	T7W V02 242	SOLENOID COIL (SV)	1	1	1	1	SV3	Includes SCREW
38	T7W V05 242	SOLENOID COIL (SV)	1	1	1	1	SV6	Includes SCREW
39	T7W E15 428	SV_ASSY	1	1	1	1	SV2	Includes SV COIL
40	T7W V06 242	SOLENOID COIL (SV)	1	1	1	1	SV2	Includes SCREW
41	T7W B06 300	BASE HEATER	1	1	1	1	BH, THP	
42	T7W A01 455	REF. MARKER (SNAP) 1P	4	4	4	4		


ELECT PARTS

MXZ-SM36NLHZ-U1

MXZ-SM42NLHZ-U1

MXZ-SM48NLHZ-U1

MXZ-SM60NLHZ-U1

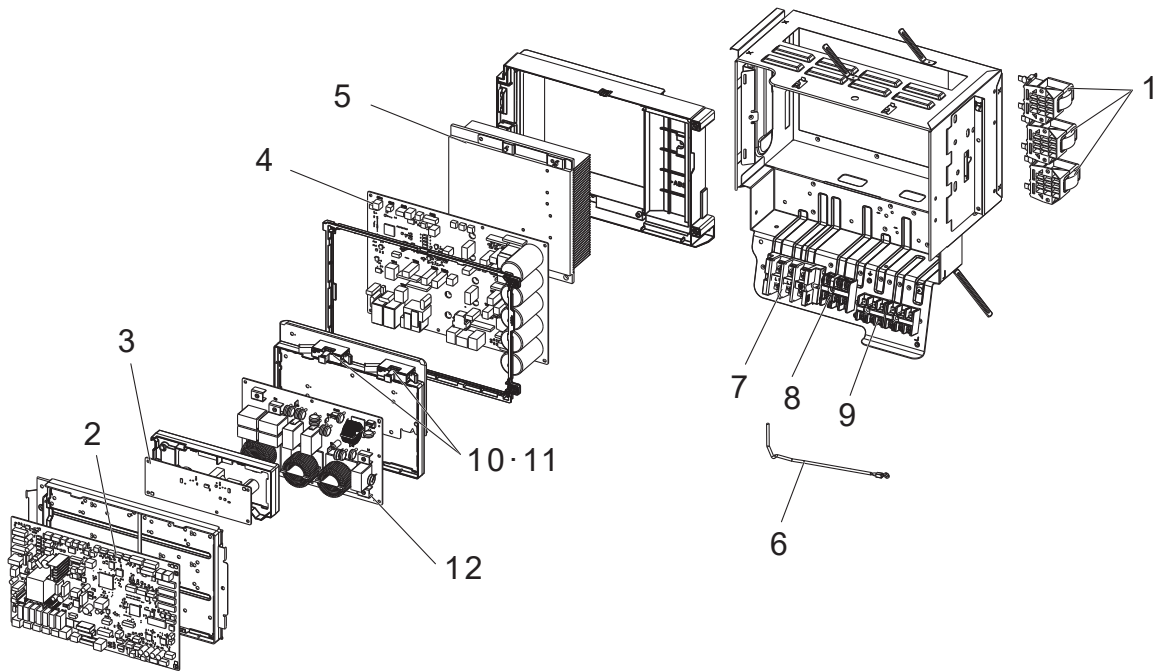


1. The part quantity below indicates the required number of pieces per unit.
2. The circled No. indicates that the part is not shown in the figure.

No.	Part No.	Part Name	MXZ-SM36NLHZ-U1	MXZ-SM42NLHZ-U1	MXZ-SM48NLHZ-U1	MXZ-SM60NLHZ-U1	Wiring Diagram Symbol	Remarks
1	R01 E58 259	REACTOR	3	3	3	3	DCL	
2	T7W M52 315	CONTROLLER BOARD	1	1	1		MULTI.C.B.	
2	T7W M56 315	CONTROLLER BOARD				1	MULTI.C.B.	
3	R01 E10 311	M-NET POWER BOARD	1	1	1	1	M-NET P.B.	
4	T7W M07 373	POWER BOARD	1	1	1	1	P.B.	
5	R01 A27 371	HEAT SINK	1	1	1	1		Includes SCREWS
6	R01 M16 202	THERMISTOR (HS)	1	1	1	1	TH8 (Heat Sink)	
7	T7W P05 246	T.B./L1.L2.E	1	1	1	1	TB1	3P (L1.L2.E)
8	T7W S05 246	T.B./B1.B2.E	1	1	1	1	TB1B	3P (B1, B2, E)
9	R01 E27 246	T.B./M1.M2.S	2	2	2	2	TB3, TB7	3P (M1, M2, S)
10	R01 E23 239	FUSE 20 A 250 V	2	2	2	2	FUSE1,FUSE2	20 A 250 V
11	R01 E00 241	FUSE HOLDER	2	2	2	2		
12	T7W E55 346	NOISE FILTER	1	1	1	1	N.F.	

LEAD WIRE ASSEMBLY

MXZ-SM36NL-U1

MXZ-SM48NL-U1

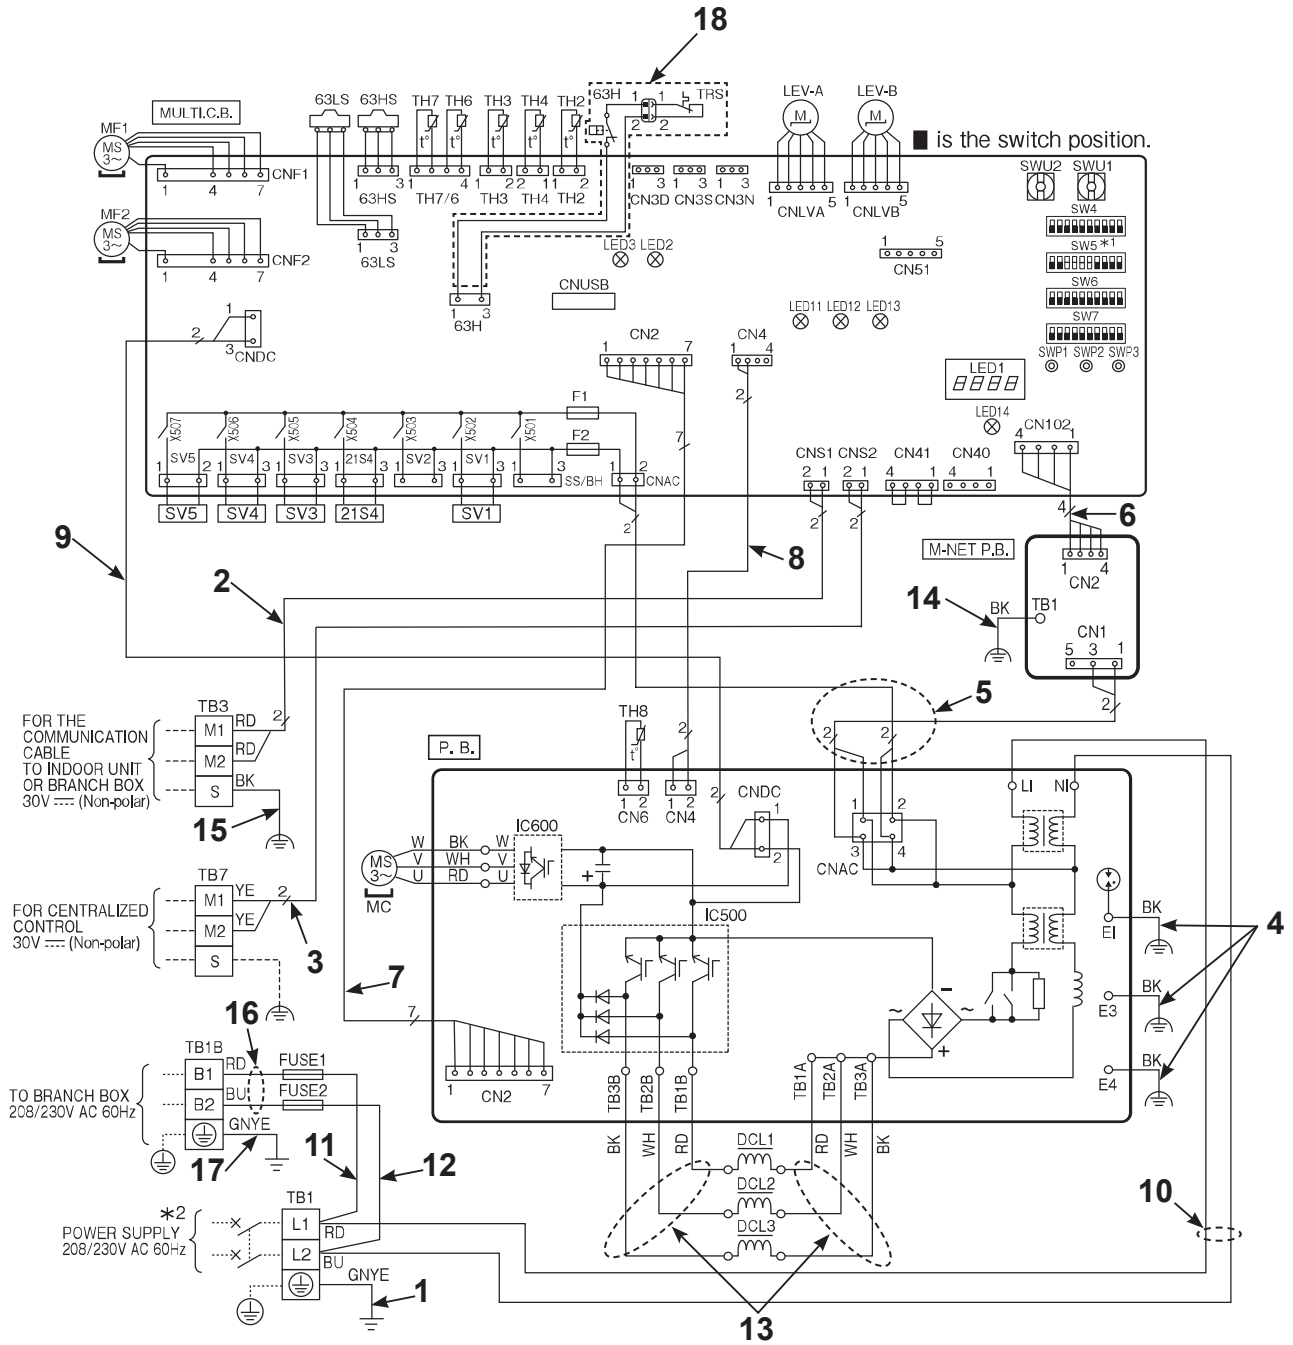

1. The part quantity below indicates the required number of pieces per unit.
2. The circled No. indicates that the part is not shown in the figure.


No.	Part No.	Part Name	MXZ-SM36NL-U1	MXZ-SM48NL-U1	Wiring Diagram Symbol	Remarks
1	T7W A40 304	LEAD WIRE ASSEMBLY	1	1		
2	T7W A41 304	LEAD WIRE ASSEMBLY	1	1		
3	T7W A42 304	LEAD WIRE ASSEMBLY	1	1		
4	T7W A53 304	LEAD WIRE ASSEMBLY	1	1		
5	T7W A54 304	LEAD WIRE ASSEMBLY	1	1		
6	T7W A55 304	LEAD WIRE ASSEMBLY	1	1		
7	T7W A56 304	LEAD WIRE ASSEMBLY	1	1		
8	T7W A57 304	LEAD WIRE ASSEMBLY	1	1		
9	T7W A58 304	LEAD WIRE ASSEMBLY	1	1		
10	T7W A59 304	LEAD WIRE ASSEMBLY	1	1		
11	T7W A60 304	LEAD WIRE ASSEMBLY	1	1		
12	T7W A61 304	LEAD WIRE ASSEMBLY	1	1		
13	T7W A62 304	LEAD WIRE ASSEMBLY	1	1		
14	T7W A63 304	LEAD WIRE ASSEMBLY	1	1		
15	T7W A64 304	LEAD WIRE ASSEMBLY	1	1		
16	T7W A65 304	LEAD WIRE ASSEMBLY	1	1		
17	T7W A51 304	LEAD WIRE ASSEMBLY	1	1		
18	T7W A66 304	LEAD WIRE ASSEMBLY	1	1		

MXZ-SM48NLHZ-U1
MXZ-SM60NLHZ-U1



1. The part quantity below indicates the required number of pieces per unit.
2. The circled No. indicates that the part is not shown in the figure.

No.	Part No.	Part Name	MXZ-SM36NL-U1	MXZ-SM42NL-U1	MXZ-SM48NL-U1	MXZ-SM60NL-U1	Wiring Diagram Symbol	Remarks
1	T7W A37 304	LEAD WIRE ASSEMBLY	1	1	1	1		
2	T7W A38 304	LEAD WIRE ASSEMBLY	1	1	1	1		
3	T7W A39 304	LEAD WIRE ASSEMBLY	1	1	1	1		
4	T7W A40 304	LEAD WIRE ASSEMBLY	1	1	1	1		
5	T7W A41 304	LEAD WIRE ASSEMBLY	1	1	1	1		
6	T7W A42 304	LEAD WIRE ASSEMBLY	1	1	1	1		
7	T7W A43 304	LEAD WIRE ASSEMBLY	1	1	1	1		
8	T7W A44 304	LEAD WIRE ASSEMBLY	1	1	1	1		
9	T7W A45 304	LEAD WIRE ASSEMBLY	1	1	1	1		
10	T7W A46 304	LEAD WIRE ASSEMBLY	1	1	1	1		
11	T7W A47 304	LEAD WIRE ASSEMBLY	1	1	1	1		
12	T7W A48 304	LEAD WIRE ASSEMBLY	1	1	1	1		
13	T7W A49 304	LEAD WIRE ASSEMBLY	1	1	1	1		
14	T7W A35 304	LEAD WIRE ASSEMBLY	1	1	1	1		
15	T7W A50 304	LEAD WIRE ASSEMBLY	1	1	1	1		
16	T7W A51 304	LEAD WIRE ASSEMBLY	1	1	1	1		
17	T7W A52 304	LEAD WIRE ASSEMBLY	1	1	1	1		

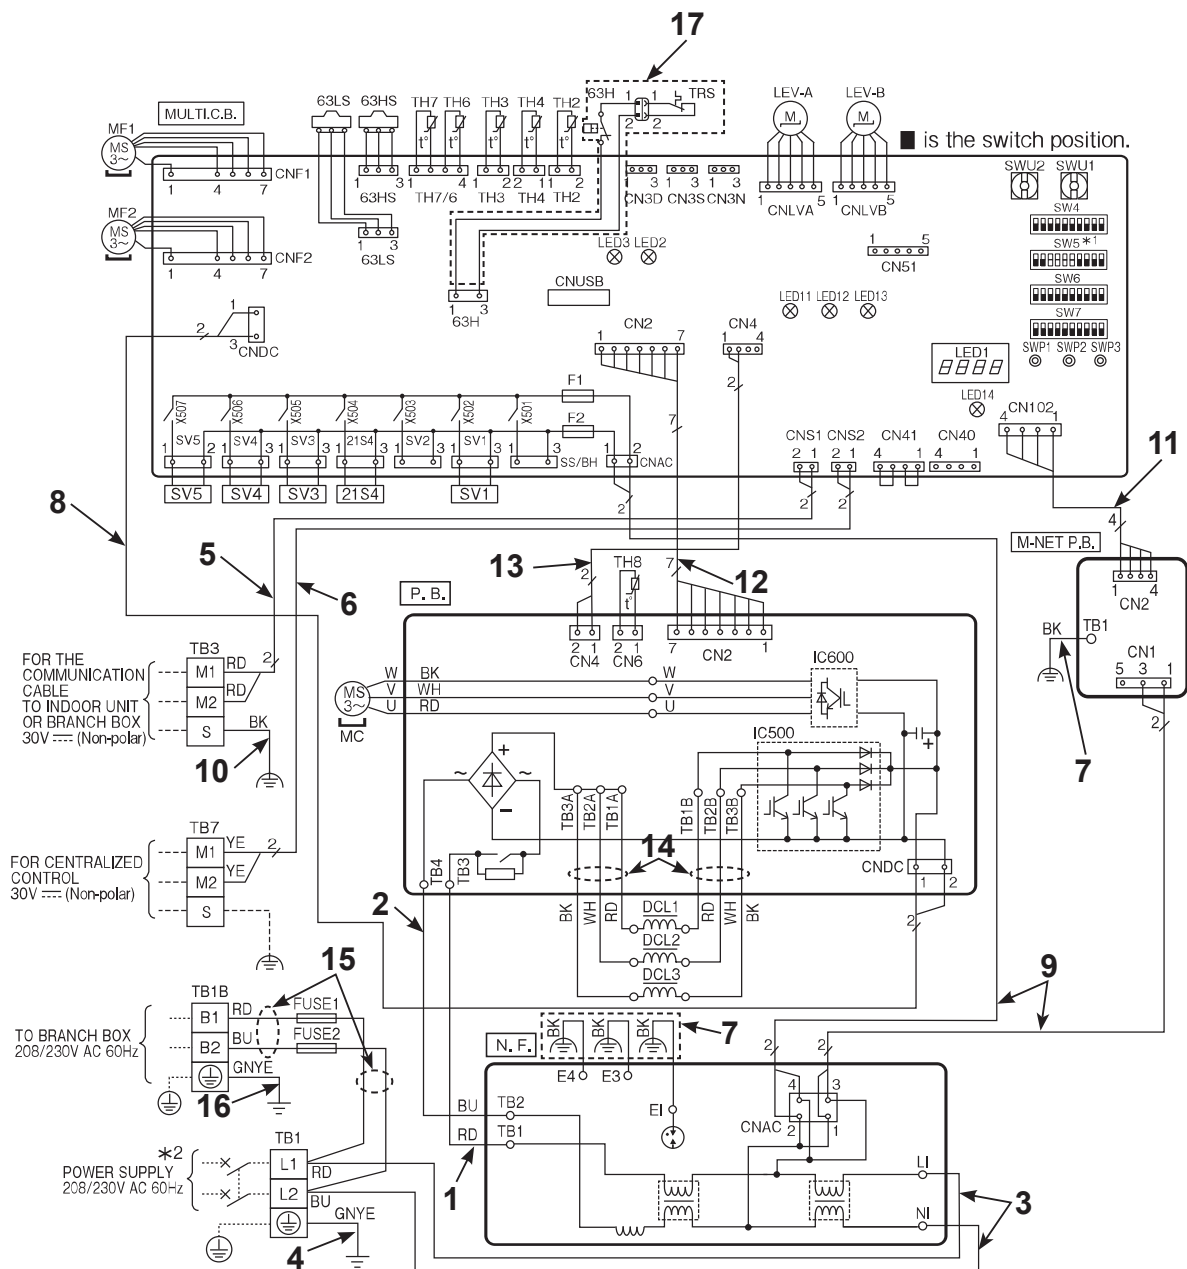

1. The part quantity below indicates the required number of pieces per unit.
2. The circled No. indicates that the part is not shown in the figure.

No.	Part No.	Part Name	MXZ-SM60NL-U1	Wiring Diagram Symbol	Remarks
1	T7W A37 304	LEAD WIRE ASSEMBLY	1		
2	T7W A38 304	LEAD WIRE ASSEMBLY	1		
3	T7W A39 304	LEAD WIRE ASSEMBLY	1		
4	T7W A40 304	LEAD WIRE ASSEMBLY	1		
5	T7W A67 304	LEAD WIRE ASSEMBLY	1		
6	T7W A68 304	LEAD WIRE ASSEMBLY	1		
7	T7W A69 304	LEAD WIRE ASSEMBLY	1		
8	T7W A44 304	LEAD WIRE ASSEMBLY	1		
9	T7W A45 304	LEAD WIRE ASSEMBLY	1		
10	T7W A70 304	LEAD WIRE ASSEMBLY	1		
11	T7W A47 304	LEAD WIRE ASSEMBLY	1		
12	T7W A48 304	LEAD WIRE ASSEMBLY	1		
13	T7W A49 304	LEAD WIRE ASSEMBLY	1		
14	T7W A35 304	LEAD WIRE ASSEMBLY	1		
15	T7W A50 304	LEAD WIRE ASSEMBLY	1		
16	T7W A51 304	LEAD WIRE ASSEMBLY	1		
17	T7W A52 304	LEAD WIRE ASSEMBLY	1		

3 OPTIONAL PARTS

Parts name	Parts No.
AIR OUTLET GUIDE*1	PAC-SH96SG-E
DRAIN SOCKET *2	PAC-SG61DS-E
CENTRALIZED DRAIN PAN*2	PAC-SH97DP-E
DEFROST HEATER	PAC-SJ20BH-E
2 BRANCH PIPE (Brazing)	MSDD-50BR-E
2 BRANCH PIPE (Flare)	MSDD-50AR2-E
2 BRANCH PIPE (Joint)	CMY-Y62-G-E
4 BRANCH PIPE (Joint)	CMY-Y64-G-E
8 BRANCH PIPE (Joint)	CMY-Y68-G-E
JOINT PIPE (Unit → Extension pipe)	PAC-SJ87RJ-E (1/4 [ø6.35] → 3/8 [ø9.52])
	PAC-SJ88RJ-E (3/8 [ø9.52] → 1/2 [ø12.7])
	PAC-SK90RJ-E (3/8 [ø9.52] → 5/8 [ø15.88])
	PAC-SK88RJ-E (1/2 [ø12.7] → 3/8 [ø9.52])
	PAC-SK89RJ-E (1/2 [ø12.7] → 5/8 [ø15.88])
	PAC-SK87RJ-E (5/8 [ø15.88] → 3/4 [ø19.05])*3
Power Supply Interface for Alarm Kit	PAC-IF55AL-E
Alarm Kit	PAC-SL54AL-E

*1: Need 2 pieces

*2: Only for MXZ-SM36/48/60NL model

It cannot be used with DEFROST HEATER.

*3: Only for MXZ-SM60

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

©Copyright 2024 MITSUBISHI ELECTRIC CORPORATION
 Issued: Jun. 2026 No. OCB819B
 Issued: Oct. 2025 No. OCB819A
 Published: Sep. 2024 No. OCB819
 Made in Japan

Specifications are subject to change without notice.